

 
Telis Soliris RTS Patio Remote Control

Installation and Operation Instructions

Single Channel


Telis 1 Soliris RTS Pure
Part # 1810635

Telis 1 Soliris RTS Patio
Part # 1810647

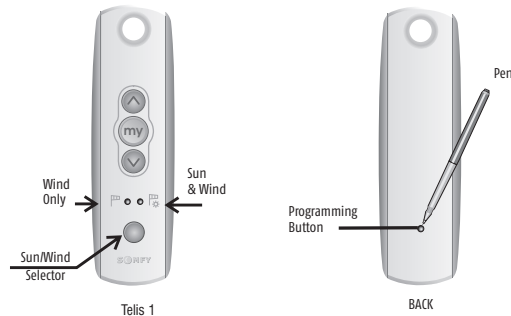

PROGRAMMING - ADDING A NEW REMOTE

 
1. Using a paper clip, pen or similar device, press and hold the Programming Button on the back of your current remote until your window shade jogs up and down.

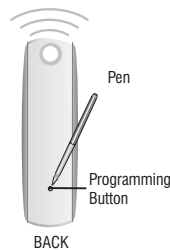

2. Pick up your new remote.



 3. Using a paper clip, pen or similar device, press and hold the Programming Button on the back of your new remote. The window shade will jog. This remote will now operate your shade or awning.

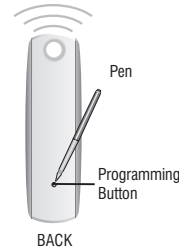

PROGRAMMING - SETTING FAVORITE 'MY' POSITION

1. Using the up (▲) or down (▼) buttons, bring the shade or awning to your favorite position, for example halfway down or out. Press the center (my) button to stop movement at the desired location.



2. Press and hold the center (my) button until the window shade jogs up and then down to record the position.



3. To reach your favorite position, press the center (my) button whenever the shade is already stopped. The shade or awning will automatically go to that position.



OPERATING

1. To raise your window shade or retract your awning, simply press the up (▲) button.



2. To lower your window shade or extend your awning, simply press the down (▼) button.



3. If you want to stop your shade or awning while it is moving, press the center (my) button.



 
ACTIVATING SUN MODE: REQUIRES OPTIONAL SUN AND/OR WIND SENSOR

NOTE: Wind sensor is factory set and does not require activation.

1. Press and hold the Sun/Wind Selector Button.




2. The light will change sides and the shade will jog. When the left side is lit, the shade or awning will only react to wind control. When the right side is lit, the shade or awning will react to both sun and wind control.

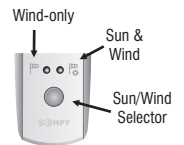


REPLACING THE BATTERY

 1. Using a small screwdriver loosen the screws on the reverse side of the remote control and remove the back cover.
2. Replace the battery with one 2430 Lithium 3V battery.

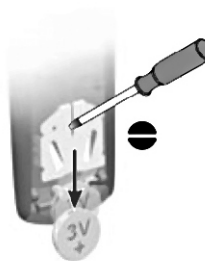

Multi Channel

 Telis 4 Soliris RTS Patio
Part # 1811243

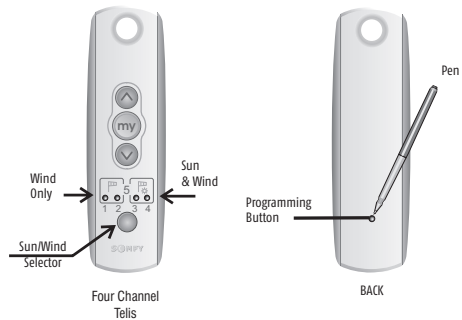


PROGRAMMING - ADDING A NEW REMOTE

1. With your current remote, select the shade to operate by pressing the Channel Selector Button. The LED lights will illuminate each time the Channel Selector Button is pressed to show what channel is being operated.



 
2. Using a paper clip, pen or similar device, press and hold the Programming Button on the back of the remote until your window shade jogs up and down.

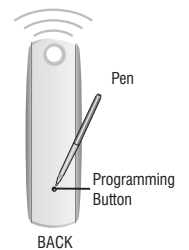

3. Get the new remote and select the new channel.



 4. Using a paper clip, pen or similar device, press and hold the Programming Button on the back. The window shade will jog. This remote will now operate your shade or awning.

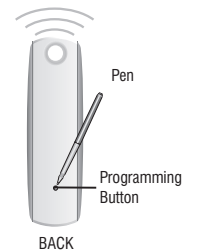

PROGRAMMING - SETTING FAVORITE POSITION

1. Select the shade to operate by pressing the Channel Selector Button. The LED lights will illuminate each time the Channel Selector Button is pressed to show what channel is being operated.



2. Using the up (▲) or down (▼) buttons, bring the shade or awning to your favorite position, for example halfway down or out. Press the center (●) button to stop movement at the desired location.



3. Press and hold the center (●) button until the window shade jogs up and then down to record the position.



4. To reach your favorite position, press the center (●) button whenever the shade is already stopped. The shade or awning will automatically go to that position.



OPERATING

1. Select the shade to operate by pressing the Channel Selector Button. The LED lights will illuminate each time the Channel Selector Button is pressed to show what channel is being operated.



2. To raise your window shade or retract your awning, simply press the up (▲) button.



3. To lower your window shade or extend your awning, simply press the down (▼) button.



4. If you want to stop your shade or awning while it is moving, press the center (●) button.



 
PROGRAMMING SUN MODE: REQUIRES OPTIONAL SUN AND/OR WIND SENSOR

NOTE: Wind sensor is factory set and does not require activation. In order to enable Sun/Wind mode for a particular shade, your shade must be programmed to the Sun/Wind channel (ALL LEDS LIT) in addition to the shades original channel number (channels 1-4).

1. Select the shade you wish to be operated by the sun sensor by pressing the SUN/WIND SELECTOR BUTTON. The LED lights will illuminate each time the SUN/WIND SELECTOR BUTTON is pressed to show what channel is being operated




2. Using a paper clip, pen or similar device, press and hold the Programming Button on the back of the remote until your window shade jogs up and down.

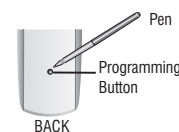

3. Select the Sun/Wind channel by pressing the SUN/WIND SELECTOR BUTTON until ALL LED lights are illuminated.



 4. Press and hold the SUN/WIND SELECTOR BUTTON. The lights will change sides and the shade will jog. When the left side is lit, the shade or awning will only react to wind control. When the right side is lit, the shade or awning will react to both sun and wind control.




ACTIVATING SUN MODE

1. Select the Sun/Wind channel by pressing the SUN/WIND SELECTOR BUTTON until ALL LED lights are illuminated.
2. Press and hold the SUN/WIND SELECTOR BUTTON. The lights will change sides and the shade will jog. When the left side is lit, the shade or awning will only react to wind control. When the right side is lit the shade or awning will react to both sun and wind control.



REPLACING THE BATTERY

 1. Using a small screwdriver loosen the screws on the reverse side of the remote control and remove the back cover.
2. Replace the battery with one 2430 Lithium 3V battery.

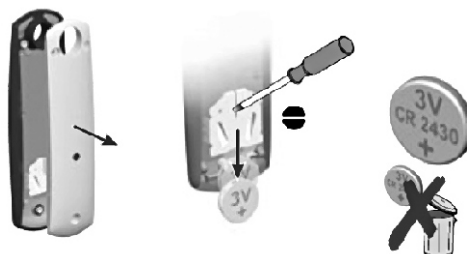

NOTE: In case of a lost transmitter, professional programming assistance is required. Please contact your local dealer. To find one, visit www.somfy.com/where-to-buy